

Start Here

Your BrightLink projector is a productivity tool that allows you to project and interact with content or create a digital whiteboard. This card will help you get started.

Note: An optional finger touch unit is required for touch interaction with projected content. If you don't have an optional finger touch unit installed, follow the instructions for the interactive pens.

What can you do?

Interact with your computer

View your desktop and use the interactive pens as a mouse.

Use your mobile device

Connect your mobile device and display your content on the screen.


Project from any source

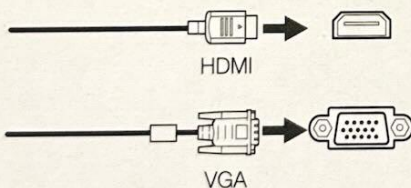 
Import content from a connected device to your whiteboard.

Start writing

 
 
 
Draw on the projected screen with the interactive pens or your finger.

Interacting with your computer

- 1 Turn on the projector by pressing the  power button on the remote control.
- 2 Connect an HDMI or VGA cable from the projector to your computer.



- 3 Connect the USB cable from the projector's **USB-B1** port directly to any available USB port on your computer.

- 4 The default language of the menu system is English. To select another language, press the **Menu** button on the remote control. Select **Management** and press . Select **Language** and press . Select your language and press . Press the **Menu** or **Esc** button to exit the menu system.

- 5 Display an image or open a web page from your computer.

If your computer screen is not projected, see "Need help?" on the back of this card.